


Remoted Relay HPR Launch Controller

January 2009

Bob Finch

NAR #12965

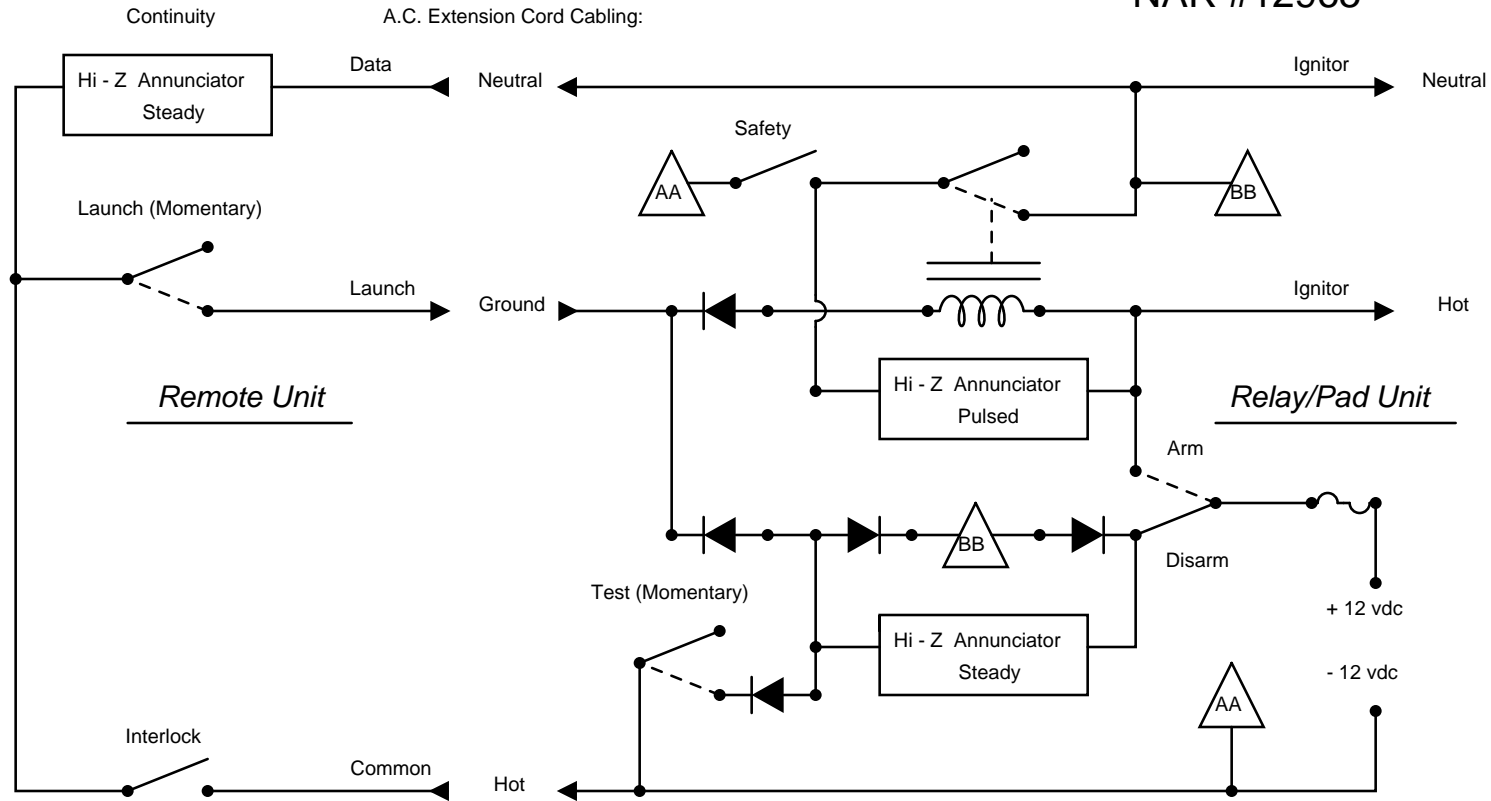

Test the cabling first with the safety switch open by toggling the Disarm/Arm switch. No sound is o.k. Repeat pressing test switch. Steady buzzer ONLY = o.k. battery in Disarm & o.k. igniter in Armed. Safety switch closed and fast pulsed and/or screeching sounds = Switch in disarm & good igniter. Slow pulsed sound = Switch in armed position. **** You should NEVER hear relay clicks during tests.