


Battery

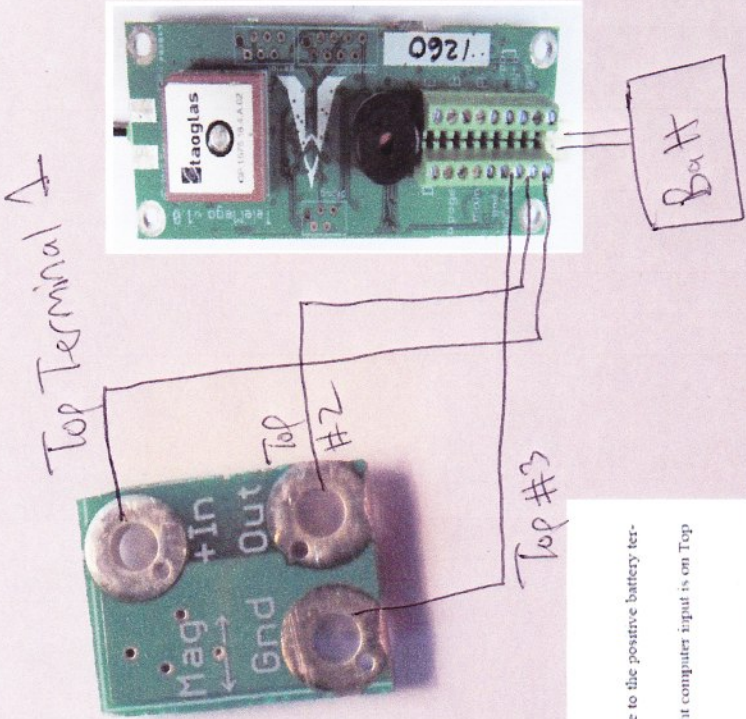

Using an Active Switch with TeleMega

As explained above, an external active switch requires three connections, one to the positive battery terminal, one to the flight computer positive input and one to ground. The positive battery terminal is available on Top terminal 1 - the positive flight computer input is on Top terminal 2. Ground is on Top terminal 3.